



QUICK START GUIDE



MERCHANT CUSTOMER SERVICE

Monday - Friday 8:00am - 5:00pm CST
1.800.944.1399 | SignaPay.com

QUICK START GUIDE

- 1 CONNECT CASH DRAWER**
Plug **orange** cash drawer cable into cash drawer port on bottom of cash drawer.

- 2 REMOVE BACK COVER**
- Remove the touchscreen's back cover by sliding the plastic cover up and out.
 - Connect the **orange** cash drawer cable to the cash drawer port.
 - Connect the round power cable to the **green** DC 19V in port, use metal hook to secure cable as shown
 - Connect the **red** ethernet cable to the **red** LAN Port
 - Secure the back cover back onto the touchscreen

- 3 LOAD RECEIPT PAPER**
- Press the gray paper door release button to open the door
 - Insert paper roll with paper feeding off the top of the roll
 - Close the door with the end of the paper coming out of the door



- 4 POWER ON TERMINAL**
The power button is located on the bottom left side of the display

- 5 COMPLETE SOFTWARE SETUP**
Contact SignaPay at your scheduled installation time to license your system and complete the software setup



signapay.com

4100 W. Royal Lane, Suite 150 | Irving, TX 75063 | 800-944-1399